
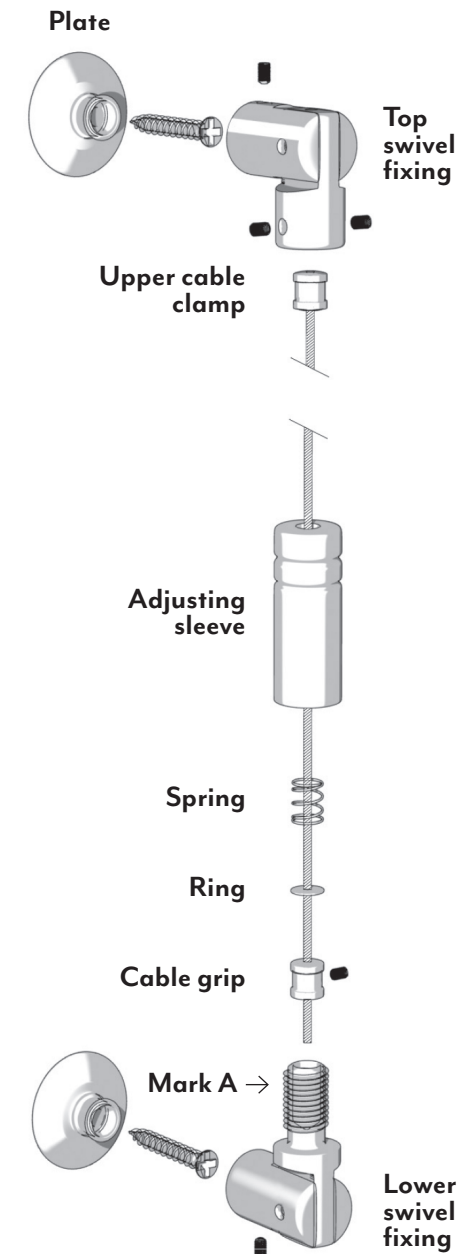
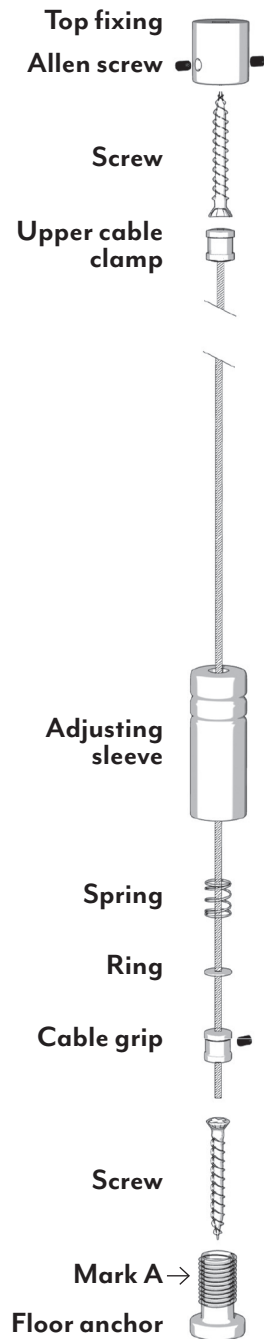


ASSEMBLY INSTRUCTIONS

CABLE KIT / WALL MOUNTED SWIVEL KIT

1. Fix the **Top fixing** into ceiling using the provided **Screw** or to the **wall mount attachment**.
2. Insert **Upper cable clamp** into **Top fixing**, then secure the two screws with the Allen key, to fix it into the **Top fixing**.
3. Fix the Floor anchor (aligned with the Top fixing) into the floor, using the provided Screw or to the **wall mount attachment**.
4. Pass the cable through the **Adjusting sleeve**, the Spring, the ring and the **Locking ring**. Stretch the cable manually close the **Floor anchor** and then cut it with a wire-cutter so it could reaches halfway up to the **Floor anchor** (Mark A).
5. Leave 1/4" clearance between the bottom of the lower **Cable grip** and the top **Floor anchor**, fix firmly the lower **Cable grip** with the provided screw.
6. Fix the **Adjusting sleeve** into the **Floor anchor** with the provided screw, without over-tightening it.

In case of an assemblage on rails (ceiling/floor or wall/wall) use 2 rails fixings instead of the screw provided with the cable kit.

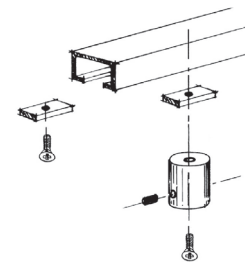



INSTRUCTIONS DE MONTAGE

KIT DE CÂBLE/ KIT PIVOTANT MURAL

1. Fixez la **fixation supérieure** au plafond à l’aide de la **vis** fournie ou à la **fixation murale**.
2. Insérez le **serre-câble supérieur** dans la **fixation supérieure**, puis serrez les deux **vis** avec la clé Allen pour le fixer dans la **fixation supérieure**.
3. Fixez l’ancrage au sol (aligné avec la fixation supérieure) dans le sol, en utilisant la **vis** fournie ou le **support de fixation murale**.
4. Faites passer le câble à travers le **manchon de réglage**, le **ressort**, la **rondelle** et la **bague de verrouillage**. Étirez manuellement le câble près de l’**ancrage au sol**, puis coupez-le avec une pince coupante afin qu’il atteigne la moitié de la hauteur de l’ancrage au sol (**marque A**).
5. Laissez un espace de 1/4 de pouce entre le bas du **serre-câble inférieur** et le haut de l’**ancrage au sol**, fixez fermement le **serre-câble inférieur** avec la **vis** fournie.
6. Fixez le **manchon de réglage** dans l’**ancrage au sol** avec la **vis** fournie, sans le serrer excessivement.

Pour les cas d’assemblage sur rails (plafond/sol ou mur/mur), utilisez 2 fixations de rails au lieu de la vis fournie avec le kit de câble.

